

#### Parkside House, Swan Street, Sileby, Loughborough, LE12 7NW

Office: 01509 815537 Fax: 01509 808638 Email: mail@waltham.co.uk Web: walthamsecurity.co.uk



#### INTRODUCTION For models: BLUE-FOX 01, BLUE-FOX 02


The innovative technology employed in the Blue-fox system ensures that reliability is paramount whilst eliminating the false alarms associated with all other external detection and alarm systems.


Blue-fox is designed to monitor the responses of two multi-scan detection units (Risco Watchout RK315DT recommended) and can instantly identify false alarm situations. Unless both detectors signal an alarm condition within one second of each other, Blue-fox does not trigger an alarm. Tamper or masking detection from either sensor unit also triggers an alarm.

- Incorporates anti-tamper mechanism.
- Works with detectors with normally open or normally closed contact closures.
- Disable anti-tamper detection from sensors during set up and testing.
- Independent, timed (20 minute) relay for triggering external alarm (Blue-Fox 2 only).
- Suitable for outdoor use (when fitted with supplied gaskets).


## ASSEMBLY INSTRUCTIONS

- 1. Remove the unit's cover.
- Connect Blue-fox to the two detection units (see the diagram below). Please refer to the instructions provided by the manufacturers of the detection units. Ensure that J3 is configured correctly for the installed detectors (the default position: NC, is suitable for Risco Watchout detectors). See the Jumper Configuration diagram for details.
- 3. Connect the Alarm output to your control system or alarm as required.
- 4. **Blue-fox 02 users only:** OPTIONAL connect an external alarm to relay 2 as shown in the connection diagram.
- 5. For testing purposes, place jumper blocks on J1 and J2 to disable anti-tamper alarms. See the Jumper Configuration diagram for details.
- 6. Power up the system and test for positioning and correct operation.
- 7. If the system is functioning correctly, power off the system; remove the jumper blocks on J1 and J2.
- 8. For external use, fit the provided gasket set.
- 9. Attach the case covers and restore power.

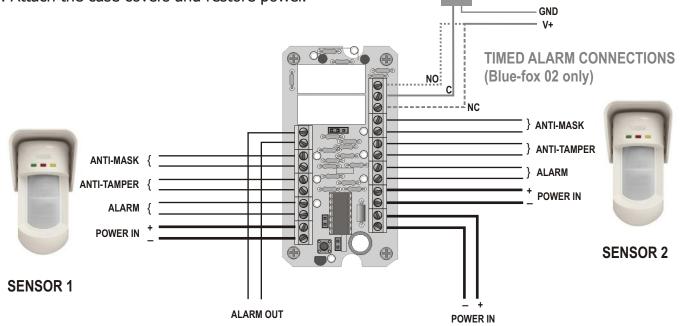

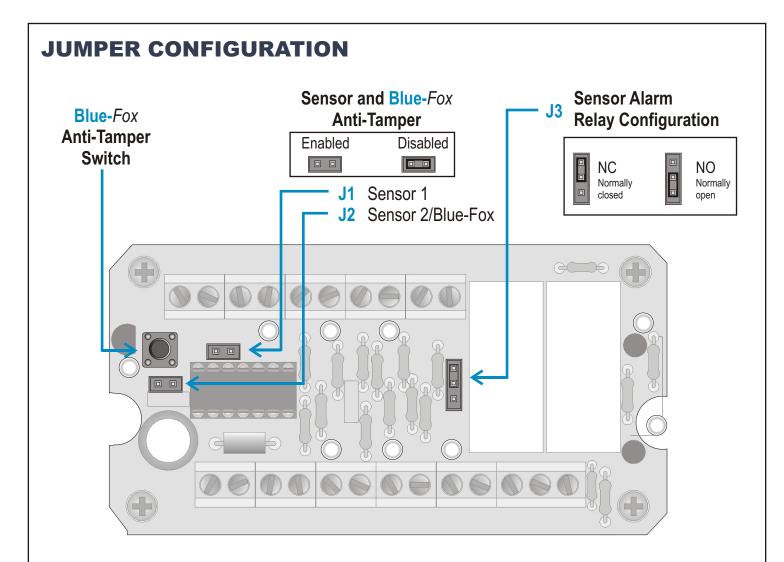

## **LED**s

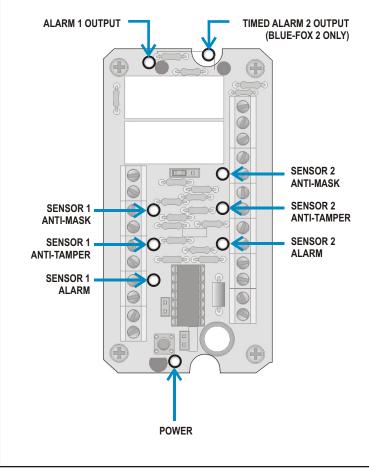

# **SPECIFICATIONS**

Power Input Power Outputs	10-14 VDC, 1A 2 x 12VDC, <1A
Standby Current Dual Detector Relay Time Alarm Relay	3mA 74mA 98mA
Inputs	2 x Sensor Alarm 2 x Sensor Anti-Tamper 2 x Sensor Anti-Masking
Relays Relay Ratings	1 x relay contact closure, NO <i>Blue-Fox2 only:</i> 1 x timed relay (20mins), NC or NO 240VAC/28VDC, 5A
Dimensions Weight	114mm x 67mm x 40mm 154g
Operating Environment	-15°C to +50°C, 0-95%RH (non-condensing)
Recommended Sensors	2 x Risco Watchout RK315DT
IP Rating	IP 65 - using gasket set supplied
Cabling	8-core alarm cable. With the exception of mains cabling, all interconnecting cable should be made with multi-core 7/.02 for distances up to 100m, longer distances up to 300m Belden type cable 8723 7/.25.